




Toshiba Portege M300 LCD Replacement

This guide will demonstrate how to install a new LCD on the Toshiba Portege M300.

Written By: Alison Wendt

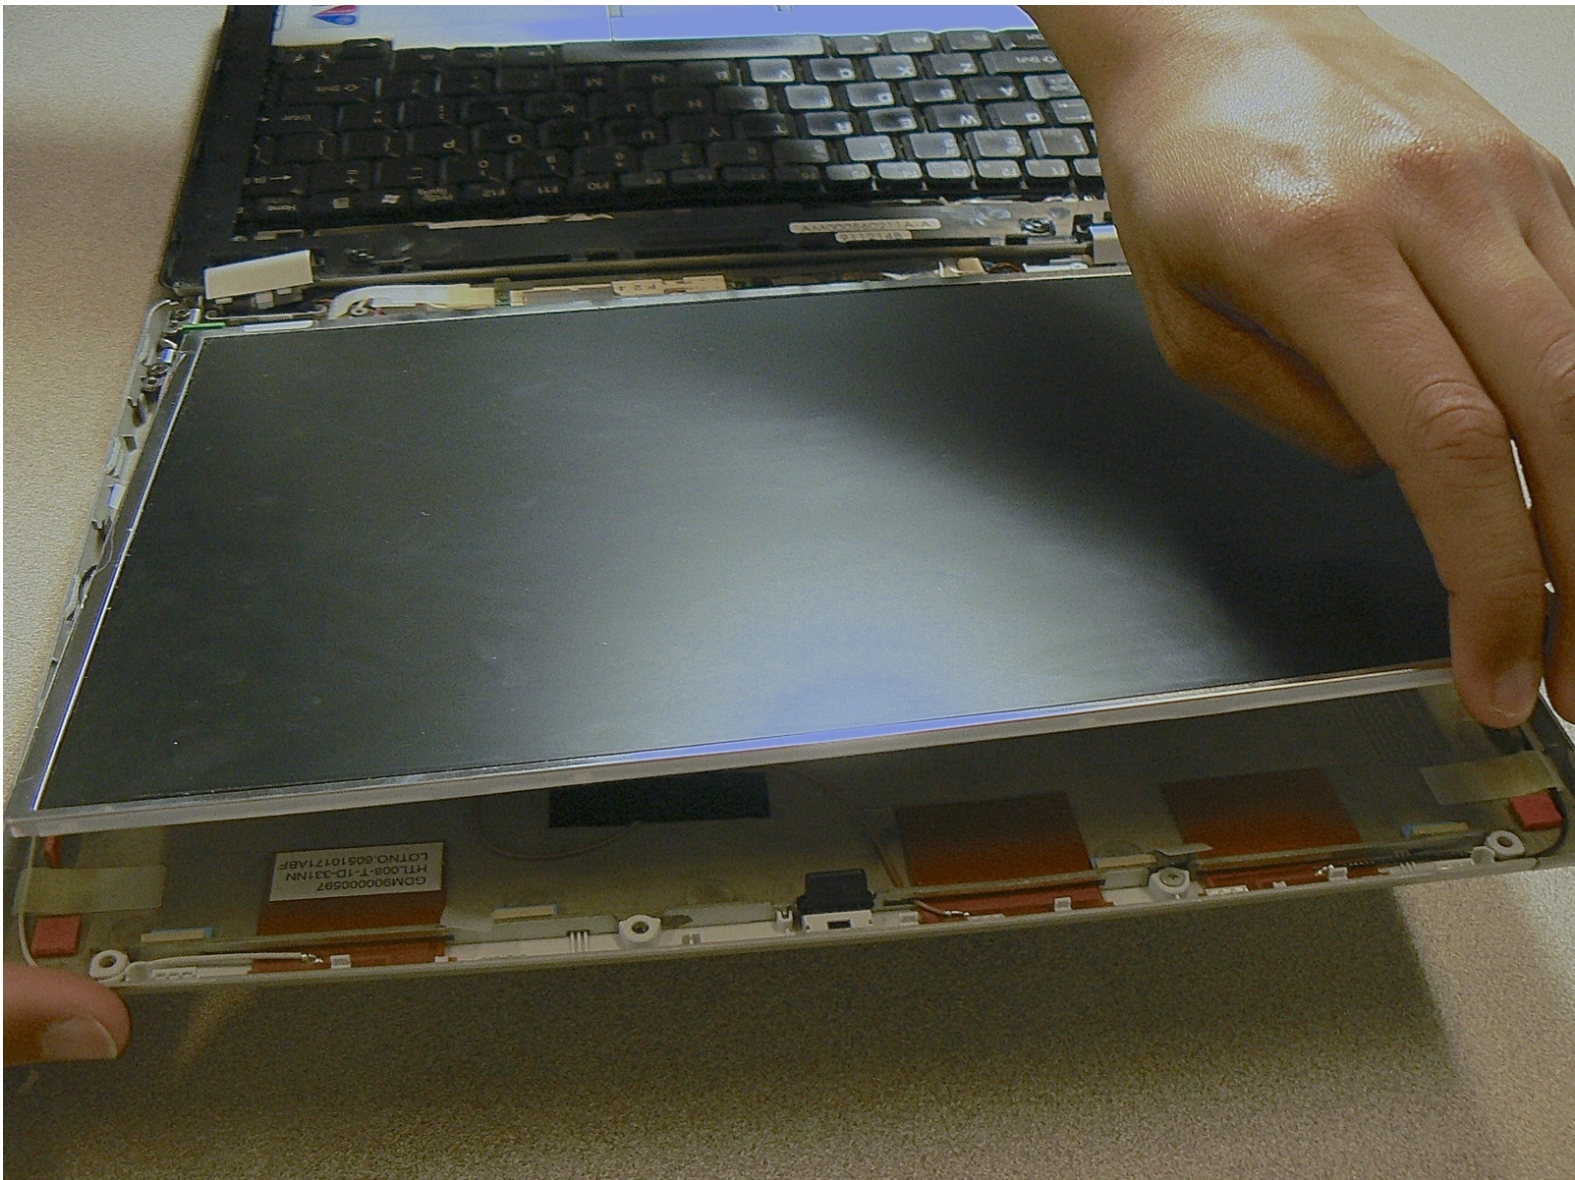

INTRODUCTION

This guide will go through the steps needed to install a new LCD panel.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Battery



- Turn the computer over onto its back.

Step 2




- Slide the lock on the left side to the unlock position.
- Slide the lock on the right side to the unlock position until there is a clicking sound.

Step 3



- Remove the battery by sliding it out while both locks remain in the unlock position.

Step 4 — LCD

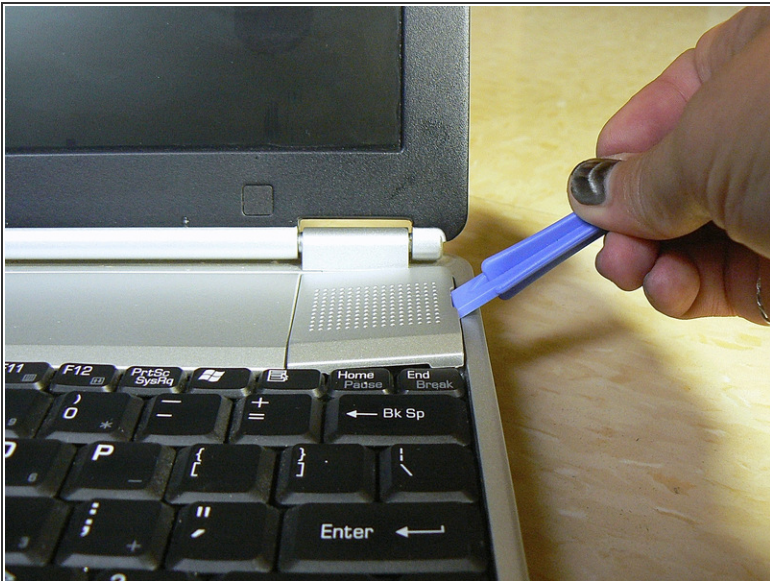

- Use a plastic opening tool to unsnap the right hand side speaker cover.

Step 5




- Remove the rest of the cover by sliding it to the right and lifting the edge.

Step 6





- Remove all 8 plastic circular covers on the plastic screen bezel.
- Only 7 of these plastic covers will contain screws underneath.
- Unscrew all screws with a Phillips head #00 screwdriver.
- Seven 3.5 mm fine thread screws.

Step 7

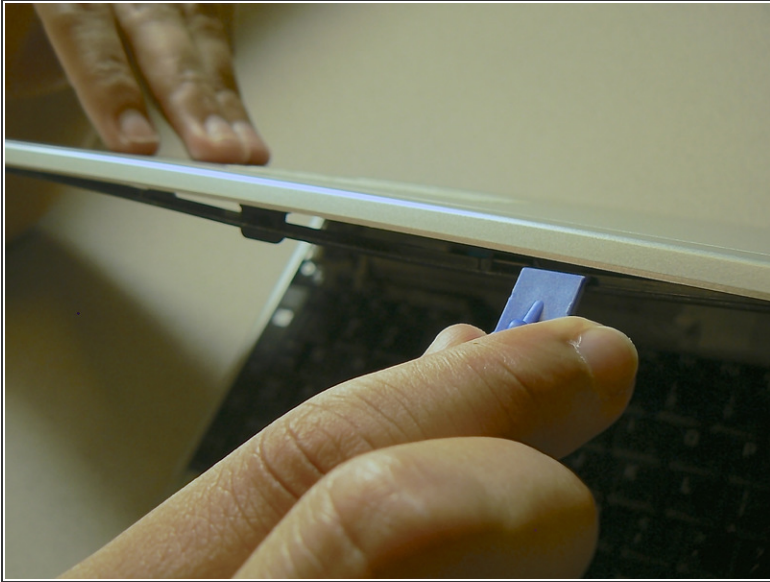


- Use a plastic opening tool to separate the screen bezel from the rest of the case.
 - Pull at the top edge of the LCD to separate it from the top part of the case.
- ⚠ Separate the casing and the LCD only by an inch, since there are still wires connecting them.

Step 8

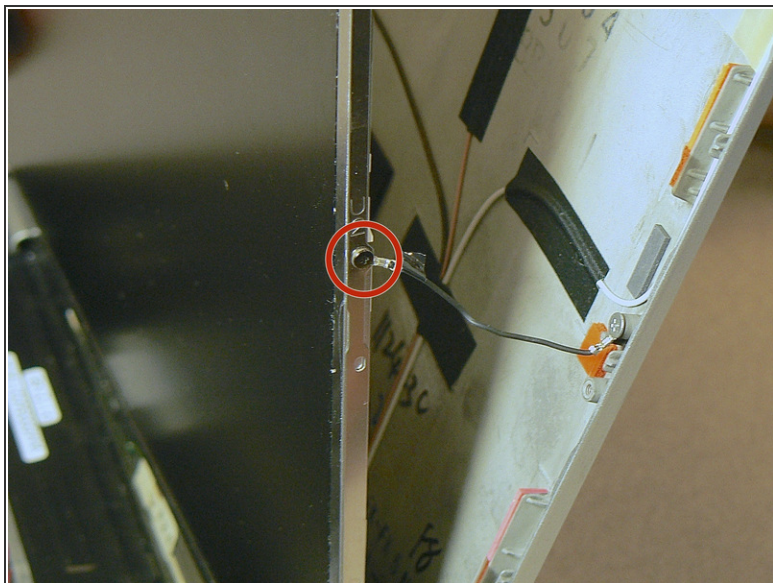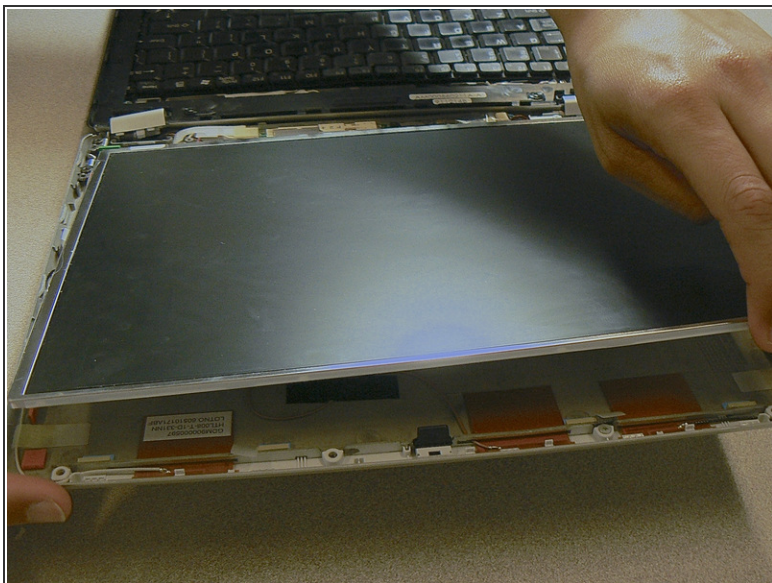



- Use a Phillips #000 to unscrew the wire connected to the right face of the LCD.
- One 2.8 mm fine thread screw.

Step 9

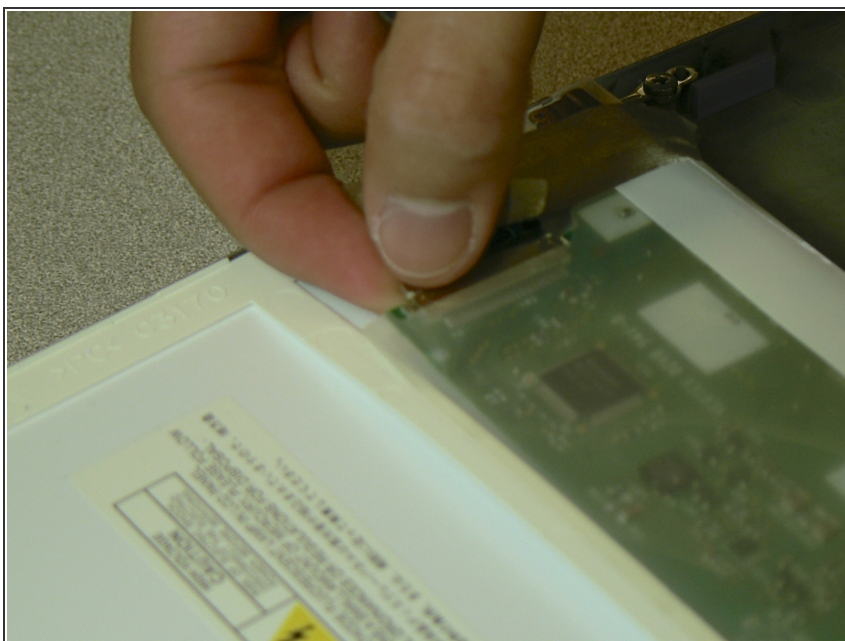

- Flip the LCD over onto the back.
- Gently pull the connection on the corner of the LCD to disconnect.

Step 10

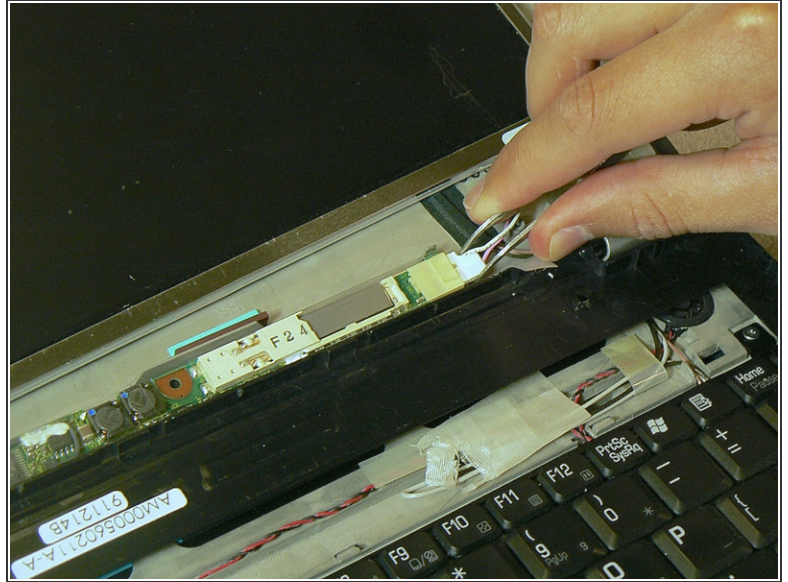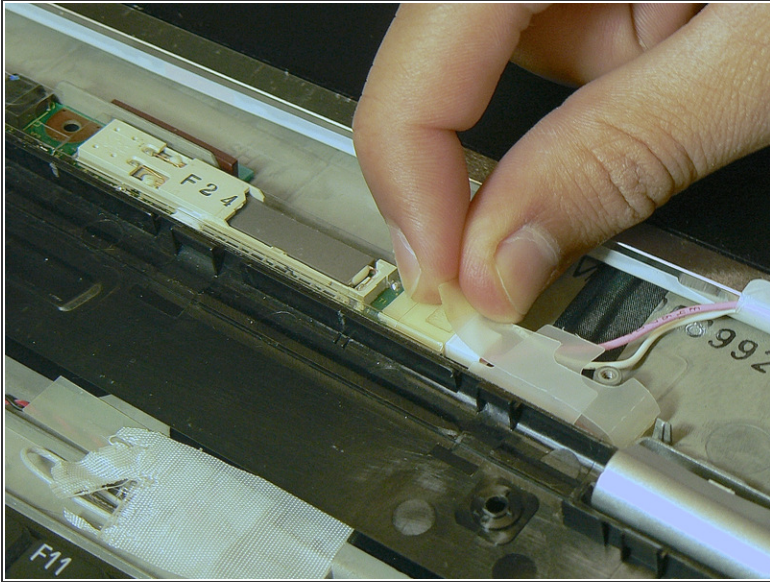

- Remove tape connecting lcd to the inverter.
- Use tweezers to remove lcd cable from the inverter.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-20 04:47:51 AM.